

ASS1, ASS2, ASS2.1 7 pin female **Mounting instruction ASS1, ASS2 7 pin female**

Aspöck Standard
ASS1, ASS2, ASS2.1, 7 pin

SPARE PART NO.: 13-5626-631

1. Connect the cable to the ASS 2 part.
2. Insert the ASS 1 part into the ASS 2 part.
3. Insert the spare part into the ASS 1 part.
4. Tighten the nut and washer to secure the connection.
5. Check the connection for proper alignment and secure fit.

Imax=25A
ASS 1 ASS 2,2,1
AMB-Zone 2
IP68

36

ASS1, ASS2, ASS2.1 7 pin male **Mounting instruction ASS1, ASS2 7 pin male**

Aspöck Standard
ASS1, ASS2, ASS2.1, 7 pin

SPARE PART NO.: 13-5625-981

1. Connect the cable to the ASS 1 part.
2. Insert the ASS 2 part into the ASS 1 part.
3. Insert the spare part into the ASS 2 part.
4. Tighten the nut and washer to secure the connection.
5. Check the connection for proper alignment and secure fit.

Imax=25A
ASS 1 ASS 2,2,1
AMB-Zone 2
IP68

38

Bayonet 5 pin female **Mounting instruction Bayonet 5 pin female**

Aspöck Standard
Bayonet 5 pin

SPARE PART NO.: 13-0521-104

1. Connect the cable to the ASS 1 part.
2. Insert the ASS 2 part into the ASS 1 part.
3. Insert the spare part into the ASS 2 part.
4. Tighten the nut and washer to secure the connection.
5. Check the connection for proper alignment and secure fit.

Imax=16A
ASS 1 ASS 2,2,1
AMB-Zone 2
IP54

18

Bayonet 5 pin male **Mounting instruction Bayonet 5 pin male**

Aspöck Standard
Bayonet 5 pin

SPARE PART NO.: 13-0536-044

1. Connect the cable to the ASS 1 part.
2. Insert the ASS 2 part into the ASS 1 part.
3. Insert the spare part into the ASS 2 part.
4. Tighten the nut and washer to secure the connection.
5. Check the connection for proper alignment and secure fit.

Imax=16A
ASS 1 ASS 2,2,1
AMB-Zone 2
IP54

20

Bayonet 8 pin female **Mounting instruction Bayonet 8 pin female**

Aspöck Standard
Bayonet 8 pin

SPARE PART NO.: 13-0828-034

1. Connect the cable to the ASS 1 part.
2. Insert the ASS 2 part into the ASS 1 part.
3. Insert the spare part into the ASS 2 part.
4. Tighten the nut and washer to secure the connection.
5. Check the connection for proper alignment and secure fit.

Imax=16A
ASS 1 ASS 2,2,1
AMB-Zone 2
IP54

22

Bayonet 8 pin female **Mounting instruction Bayonet 8 pin female**

Aspöck Standard
Bayonet 8 pin

SPARE PART NO.: 15-0821-524

1. Connect the cable to the ASS 1 part.
2. Insert the ASS 2 part into the ASS 1 part.
3. Insert the spare part into the ASS 2 part.
4. Tighten the nut and washer to secure the connection.
5. Check the connection for proper alignment and secure fit.

Imax=16A
ASS 1 ASS 2,2,1
AMB-Zone 2
IP54

24

Bayonet 8 pin male **Mounting instruction Bayonet 8 pin male**

Aspöck Standard
Bayonet 8 pin

SPARE PART NO.: 13-0838-054

1. Connect the cable to the ASS 1 part.
2. Insert the ASS 2 part into the ASS 1 part.
3. Insert the spare part into the ASS 2 part.
4. Tighten the nut and washer to secure the connection.
5. Check the connection for proper alignment and secure fit.

Imax=16A
ASS 1 ASS 2,2,1
AMB-Zone 2
IP54

26