REAR VIEW SYSTEM

AHD Monitor

Before using the product, please read this manual carefully and keep it for future reference.

1. Product specification

1). Screen:7 inch color TFT LCD screen
2). Resolution:1024*RGB*600
3). System:PAL/NTSC automatically
4). Support up to 4CH 1080P/720P/CVBS input
5). Image display: Support Single/ Double/ Triple/ Quad images display
6). Trigger: Support up to 4CH triggers
7). DC 12V~24V power supply
8). Operate temperature: -20℃ ~+70℃
9). Storage temperature: -30℃ ~+80℃
10). sun shade :Yes-removable
11). operation: Support panel buttons and remote control
12). Recording:support 4 channels real time recording
13). Video compression format: H.264
14). Video format: AVI
15). Automatic video recording(if insert SD card)
16). Storage: SD memory card(class 10), MAX 256G
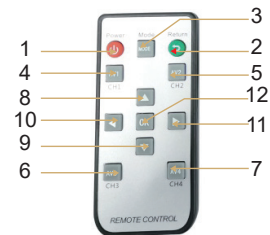17). Playback: support to playback of each camera

2. Product Introduction

Panel introduction

1). Sunshade cap
2). Display screen
3). Metal LOGO plate
4). MENU
5). CH1
6). CH2
7). Power
8). CH3
9). CH4
10). Mode switch
11). Remote control window

Remote control introduction

1). Startup/shutoff monitor
2). Return to the default screen/to the previous step
3). Switch multi-screen display mode circularly
4). CH1
5). CH2
6). CH3
7). CH4
8). Up
9). Down
10). Left
11). Right
12). Menu + confirmation

Connection Introduction

CH1 trigger
CH2 trigger
CH3 trigger
CH4 trigger
power +12V-24V
ACC
GND
CH1
CH2
CH3
CH4

MONITOR MENU CH1◄ CH2► ⏻ CH3▼ CH4▲ MODE

Product Size

209.96
180
74.1
50
121
134
79.15
11
2
35

MONITOR
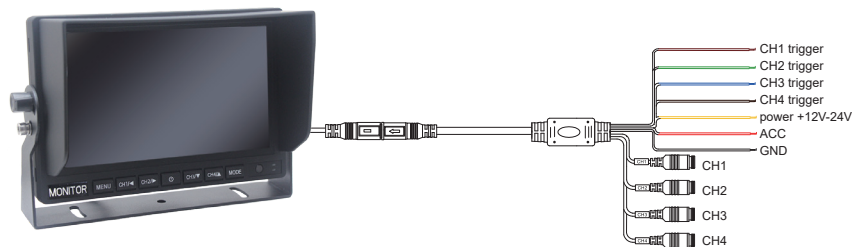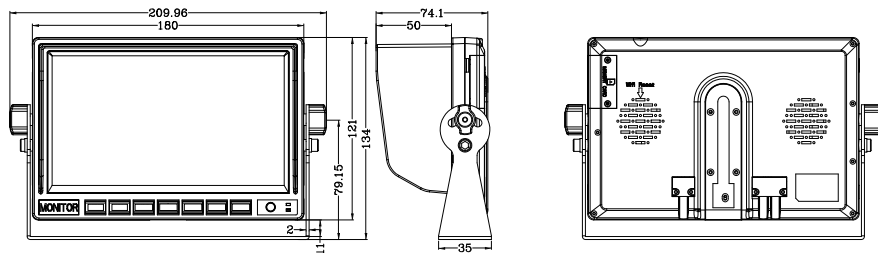
3. Menu Setting Introduction

CH1	SETTINGS	
PICTURE	▶	
PLAYBACK	▶	
VOLUME	20	
ROTATE	02	
BLUE SCREEN	ON	
LANGUAGE	ENGLISH	
TIME STAMP	OFF	

2020/04/12 03:58:11

CH1	SETTINGS	
LANGUAGE	ENGLISH	
TIME STAMP	OFF	
AUTO CYCLE	OFF	
AUTO DIM	OFF	
ACC DELAY	▶	
GUIDE LINE	▶	
TIME SETTING	▶	

2020/04/12 03:58:13

| CH1	SETTINGS	
GUIDE LINE	▶	
TIME SETTING	▶	
SHRINK VIDEO	OFF	
MIRROR FLIP	▶	
FORMAT	▶	
DEFAULT SETTING	▶	
VERSION	22110204	

2020/04/12 03:58:11

1). Picture settings: adjust brightness/color/contrast/reset for each camera.
2). Playback settings
3). Volume settings: adjust volume.
4). Rotate settings: image is flipped horizontally.
5). Blue screen settings: on(by default)/off(black screen).
6). Language settings: english(by default).
7). Time stamp settings: off(by default)/ on, if turn on, all channels will display the real-time and show time when played back video.
8). Auto cycle: off(by default)/single channel full screen display automatically.
9). Auto dim: off(by default)/on.
10). ACC delay settings: adjust delay time for each camera.
11). Guide line settings: on/off for each channel.
12). Time settings: can set the year/month/date/hour/minute/second.
13). Shrink video:off (by default)/on.
14). Mirror flip settings: off (by default)/on, mirror/non-mirror image adjustment for each channel.
15). Format
16). Reset
17). Version number

Playback interface instructions
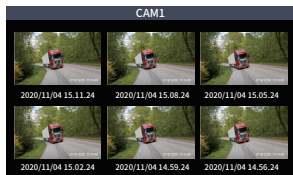
1. Press"MENU"to enter the palyback interface.

2. Press "CH1" or "CH2" to select cam1/cam2/cam3/cam4 recording file in the playback list.

3. Press "CH3" or "CH4" to select previous file/next file in the playback list.

4. 2019/12/20 13:14:36 : REC real date and time.

5. 2019/12/20 13:14:48 : current recording file playback time display.

4. Accessories

User manual*1PCS	Power cable*1PCS	Remote control*1PCS	Hexagon wrench*1PCS

Attention

To ensure our safety,the driver should not watch the video files or operate the monitor.The amateurish workers should not disassemble it without permission.If there are any product problems, please consult the local after-sales agency or take the defective product to the local maintenance department for repairing.

Warning: Please obey the local laws to install the product at a right position. Our company is not responsibility for the law issue caused by the illegal installing.

Attention: When the weather is very cold. The LCD may be dark with power on. After the temperature will increase gradually, the LCD should be back to normal.

Don't press the LCD, which will cause the image distortion or faulty. please use soft wet cloth clean the LCD gently. Don't put this product into the wet environment or water, which will lead to short circuit, unnecessary loss or fire. please format SD card before insert it to the monitor. And put the SD card into the monitor under power off state. please stop recording or cut off the power before take out the SD card, in case there are any contents lost in the SD card.